



Adams House, 4 Dundee Way, Brimsdown, Enfield EN3 7SX
Tel; 020 8805 4537 Email; info@cateringhire.co.uk
www.cateringhire.co.uk

**ELECTRIC CREPE MAKER
NOT TO BE USED OR OPERATED BY CHILDREN**

Place on a suitable and secure surface.

Plug the appliance into a plug socket and switch on.

Heat the appliance to 270C then reduce to approx. 200C/230C – this is the optimum temperature for crepes.