



Adams House, 4 Dundee Way, Brimsdown, Enfield EN3 7SX
Tel; 020 8805 4537 Email; info@cateringhire.co.uk
www.cateringhire.co.uk

**ELECTRIC THERMAL FOOD BOX
NOT TO BE USED OR OPERATED BY CHILDREN**

Attach the lead supplied to the appliance and then plug into a suitable wall socket.

Preheat the appliance whilst empty and the door closed for approx. 45 minutes prior to loading hot food.

When the inside door thermometer reads 150F or 65C you can then load the food into the container and close the door and latch tightly.

If transporting the hot food, detach the cord from the appliance.

You can also pre-chill or pre-heat this appliance.

To pre-chill – place frozen ice blocks inside, close the door tightly and leave for about 45 mins.

To pre-heat – place hot water in a container and leave for approx. 45 mins