



Adams House, 4 Dundee Way, Brimsdown, Enfield EN3 7SX
Tel; 020 8805 4537 Email; info@cateringhire.co.uk
www.cateringhire.co.uk

**INDUCTION HOB
NOT TO BE USED OR OPERATED BY CHILDREN**

THIS APPLIANCE WILL ONLY WORK WITH INDUCTION SUITABLE PANS

Place on a safe, sturdy and suitable surface

Place a suitable pan on the surface of the glass plate.

Turn On and the on/off light will illuminate.

If unsuitable pans or no pans present the induction cooker will beep and turn off after 60 seconds