



**A D A M S**

A D A M S  
Catering Equipment & Furniture Hire  
Adams House, 4 Dundee Way, Brimsdown, Enfield EN3 7SX  
Tel; 020 8805 4537 Email; [info@cateringhire.co.uk](mailto:info@cateringhire.co.uk)  
[www.cateringhire.co.uk](http://www.cateringhire.co.uk)

### **TURBO OVEN**

Power supply 2.9-3.2kw socket

PLEASE NOTE THE VENT LOCATED ON THE OVEN TOP MUST NEVER BE OBSTRUCTED.

Controls.

Power- Press to switch power on or off. Switch lights up when power is on.

Thermostat- Temperature range 5-250°C (120-550°F). Indicator lights up when the elements are cycling on, to maintain a set temperature.

Grill/broil position- The grill/broil function has been set. The heating indicator will also illuminate whenever the elements are on.

Bake Timer- 1 hour bake timer (indicator lights up and buzzer sounds when timer is finished and reaches '0').

Roast 'n' Hold- Press switch to activate 'Roast 'n' Hold' function. Switch lights up when on.

Roast Timer- 3 hour roast timer. Product is held at 75°C (167°F). Indicator lights up when timer is finished.

Light switch- Push switch to activate oven lights.

### **FAULTS**

If the oven does not start/operate- check the mains switches on the wall circuit breaker or fuses are on. Press power switch on the oven, switch will light up when on.

If the baker timer does not time down- check the time is set correctly, for settings less than 10 minutes, first set to greater settings, then turn back to desired setting.

If the roast timer doesn't count down- press roast 'n' hold button (roast timer only operates when this is selected).

If the oven light doesn't illuminate- Check bulb is not blown and if so, replace bulb.

**DO NOT ALLOW CHILDREN TO OPERATE OVEN.**

**PLEASE USE OVEN GLOVES WHEN REMOVING THINGS FROM THE HOT OVEN AND DO NOT TOUCH THE INSIDE OF THE OVEN WITH BARE HANDS.**